


NOTE:

1. USE 5:1 (AGGREGATE: CEMENT) MIX FOR CONCRETE EDGE.
2. RECOMMENDED FOR NON-FREEZE THAW AREAS.
3. CONSTRUCTION OF THIS DETAIL CAN BE USED ON RESIDENTIAL DRIVEWAYS IN NON-FREEZE THAW AREAS. REINFORCING MAY BE REQUIRED IN THE EDGE RESTRAINT.
4. THICKNESS OF AGGREGATE BASE WILL VARY WITH SUBGRADE CONDITIONS AND CLIMATE. COLDER CLIMATES MAY REQUIRE THICKER BASES.

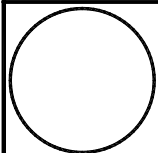

PATIO/WALK/RESIDENTIAL DRIVEWAY W/
TROWELED CONCRETE EDGE RESTRAINT

DRAWING NO.	ICPI-50
SCALE	F.S.